


DADDI LONG LEGS®




Installation Instructions


Make sure the rods of the Daddi Long Legs extend past the edge of the mounting surface.

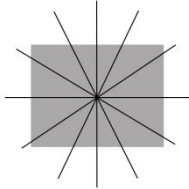

On larger platforms, the rods must intersect one another for complete coverage.

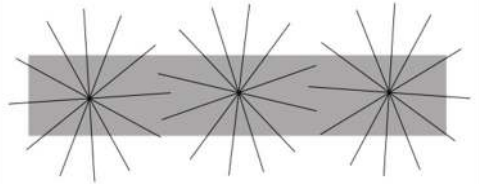

From the side view, the tips of the rods should be no more than 2" above the platform.

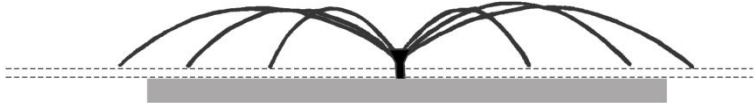

Installation Using Screws (not supplied):

1) Make sure you will not damage the equipment when drilling holes thru it. Air conditioners and lights often have sensitive equipment near the surface. Look inside before drilling.

2) Peel the paper off the adhesive gasket.


3) Using a cordless screwdriver, drive self-tapping screws through the three holes in the base. It's that easy.

Note: Do not use the adhesive gasket to secure the unit in place. The gasket is provided only to prevent water from entering through the screw holes.

Installation using Adhesive:

The Delrin base of the Daddi Long Legs cannot be glued. You must use an intermediate PVC base adapter as shown: (available from Bird-X, Inc.)

- Make sure the mounting surface is clean and free from droppings, dust, peeling paint, rust, etc.
- Screw the Daddi Long Legs base to the PVC base adapter using the screws provided
- Apply a zig-zag of adhesive to the bottom of the base (the bottom of the base is the side where the screw holes are very small).

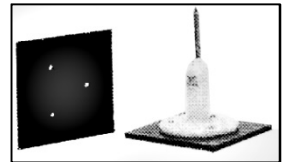

Removing the spindle:

The top part (which contains the twelve rods) can be removed from the base by pulling it upwards. When putting it back together, make sure the lock-disk is forced back up inside the spindle with a screwdriver.