


Precautionary Statement: Please Read the Labels thoroughly on the Box

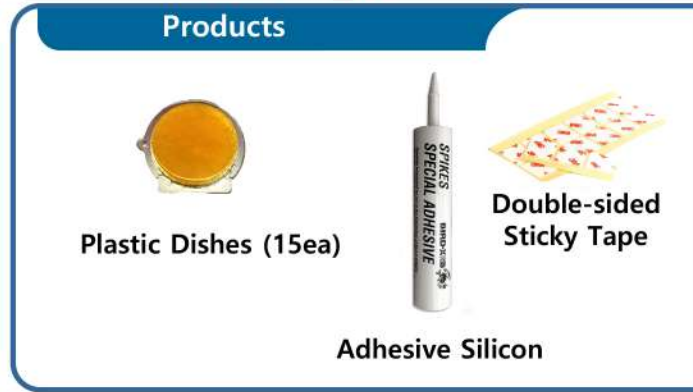

Mounting Method of “Bird Free Optical Deterrent”

15 plastic dishes are shipped with each box of “Bird Free Optical Deterrent”.

1. PREPARING SURFACES FOR TREATMENT



1. Before installation, require personal protective equipment like disposable gloves & respiratory protection against hazards.
2. Prepare the place for installation as mentioned above by cleaning-up bird nests, dirt, droppings, excrement, etc. This is very important process to ensure the product efficacy.

2. Apply the Adhesive silicon at dishes



3. Fix the dishes with adhesive silicon or similar on the back of the dishes on the surface in about 7~20 inches(10~50cm) interval, ideally 8 inches interval.

- * Guidelines for pigeon
 - Nesting site : 6”(15cm) interval at the max.
 - Roosting site : 8”(20cm) interval at the max.



- * No material properties change at -20°C ~ 80°C
- Contact us for working temperature

- * Effective coverage: 3.5 linear meter per cartridge and DIY pack(15dishes/pack)

3. Attach the Dish onto Position



- Attach the dish on the site damaged by the birds
- *Attach at intervals of 6 inches – 20 inches apart (10 cm ~ 50 cm) depending on the degree of bird damages
- ⇒ Refer to the “Installation Guide of “Bird Free”. It should be installed according to the habitat environment of the bird.
- *Habitat site : interval with 4 inches – 6 inches (10 cm ~ 15 cm)
- *Semi-Habitat site : interval 8 inches – 10 inches (20 cm ~25cm)
- *Roosting site : interval with 12 inches – 20 inches (30 cm ~50cm)